


## Air Cleaner Maintenance

The air filter element accumulates dust and must be cleaned periodically. If the motorcycle is ridden in unusually dusty areas, the filter element will require more frequent cleaning than specified in the Maintenance Schedule.


1. Remove the right side cover from the motorcycle.
2. Unscrew the three air cleaner mounting nuts ①, disconnect the air cleaner tube from the carburetor, and remove the

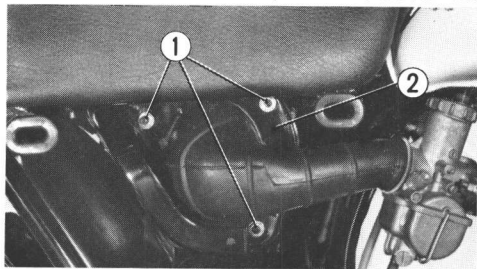

- ① Air cleaner mounting nuts  
② Air cleaner

air cleaner ② from its case.

3. Remove the filter element ③ from the air cleaner, wash air filter element in clean stoddard solvent and allow to dry thoroughly.
4. Soak air filter element in clean gear oil (#80~#90) until saturated, then squeeze out excess oil.
5. Reassemble and install the air cleaner.
6. Install the right side cover.

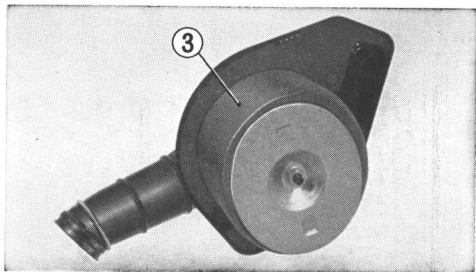

- ③ Air cleaner element