


Fuel Filter Maintenance

The fuel filter is incorporated in the fuel valve ① which is mounted on the bottom of the fuel tank at the left side. Accumulation of dirt in the filter will restrict the flow of the fuel and cause the carburetor to malfunction, therefore, the fuel filter should be serviced periodically.


1. Turn the fuel valve ① to the "S" position.
2. Unscrew the fuel filter cap ④. Wipe

all sediment from the inside of the cap.

3. Remove the "O" ring seal ③ and the filter screen ②.
4. Wash the filter screen in solvent or gasoline.
5. Reinstall the filter screen, "O" ring, and cap.
6. Turn the fuel valve to the "ON" position and check for leakage at the filter cap.

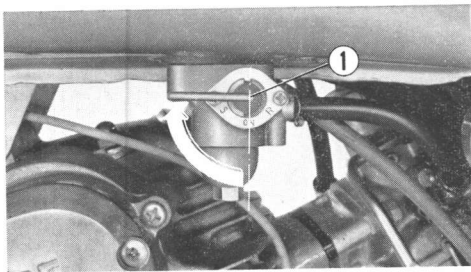

① Fuel valve

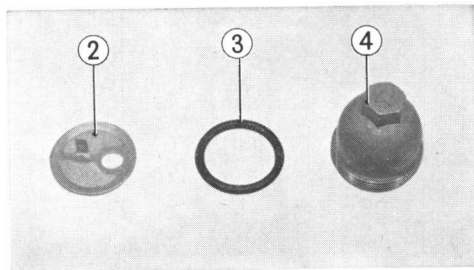

② Filter screen

③ "O" ring seal

④ Filter cap