


2. Refill each fork leg with 4.9~5.3 ozs. (145~155 cc) of quality ATF and reinstall the filler plugs.

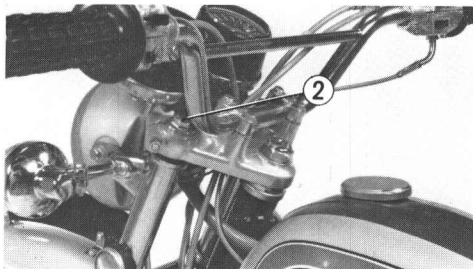


② Filler plug

Battery Maintenance

The battery is mounted in the center of the frame, on the left side, below the seat, and is accessible by removing the left side cover from the motorcycle. The side cover is retained by tabs which clip into the frame.

Battery electrolyte level should be checked once a month. The electrolyte level must be maintained between the upper ② and lower ③ marks on the side of the battery. This check must be performed with the motorcycle standing upright on level ground.

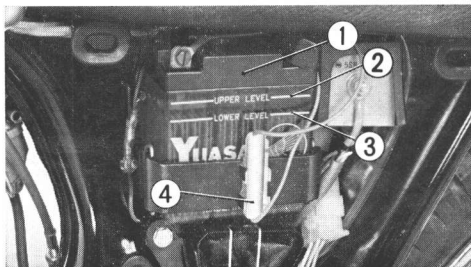

① Battery ③ Lower level mark
② Upper level mark ④ Fuse