

## MAJOR COMPONENTS

### (Information you need to operate this motorcycle)

---

#### Front Brake Lever:

The distance between the tip of the brake lever and the grip can be adjusted by turning the adjuster.

#### **CAUTION:**

- ***Align the arrow on the brake lever with index mark on the adjuster.***

