

# OPERATION

## TRACTION CONTROL SYSTEM (TCS)

(For Some Type)

The traction control system (TCS) assists you in maintaining traction by regulating the spinning force of the rear wheel that is often caused by change in the road surface while running straight. When riding on loose, slippery, or uneven surfaces, you may notice the engine does not respond to the throttle in the same way it usually does. This is a sign that TCS is activated and operating. The TCS Activation Light will turn on to signal you. Once you know TCS is active, reduce your throttle input and ride with extra care.

The TCS automatically placed in the ON mode when the ignition is ON.

The TCS is the system that assists you in throttle operation and it does not make up for a rough driving. It is still your responsibility to ride at reasonable speeds and to leave a sufficient margin of safety.

### ⚠ WARNING

- ***Though your motorcycle is equipped with TCS, avoid driving on snow-covered road, frozen surface, etc.***

### NOTE:

- Engine intake and exhaust noise may change when the TCS is active.
- TCS may be activated by riding over a sharp drop or rise in the road level.

