

-
- Tighten and torque the following nuts and bolts:

Axle nut torque:

110 N·m (11.0 kg-m, 80 ft-lb)

Axle holding bolt torque:

27 N·m (2.7 kg-m, 20 ft-lb)

- Apply the brake several times and check for free wheel rotation when released.

⚠ WARNING

- *If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.*

