
Battery Removal

The battery is located in the battery box under the left side cover.

1. Remove the left side cover (page 66).
2. Remove the battery holder by removing the bolt.
3. Disconnect the negative (-) terminal lead from the battery first.
4. Pull the battery out of the battery box.
5. Disconnect the positive (+) terminal lead.

Installation Note:

Reverse the removal procedure.

