

MAINTENANCE

- Side Cowl

1. Remove the airduct/maintenance cover, top cover and front lower cover.
2. Remove the right fairing pocket lid (page 43).
3. Remove the fairing inner cover by removing the bolts and screws.
4. Remove the front under cowl by removing the bolts and screws.
5. Remove the side cowl by removing bolts and screws.

