


ELECTRICAL

5. Turn the socket 90° counterclockwise, then pull it out toward you.
6. Slightly press down on the bulb and turn it counterclockwise.
7. Install a new bulb in the reverse order of removal.

NOTE:

- * Do not use bulbs other than that specified.
- * After installing a new bulb, check that the light operates properly.

<Tail/Brake light Bulb>

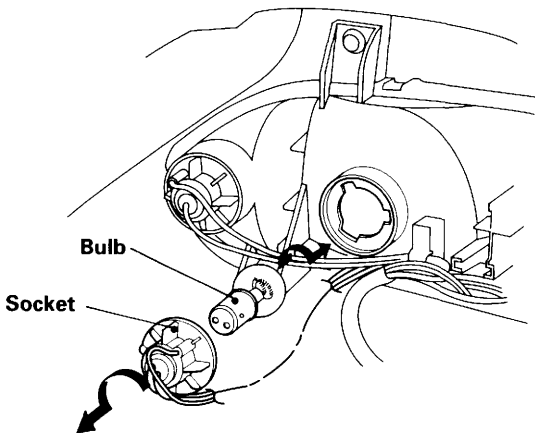

<Rear Turn Signal Bulb>

