


PARTS LOCATION

INSTRUMENTS AND INDICATORS

The indicators are incorporated in the instrument panel. Their functions are described on the following pages.

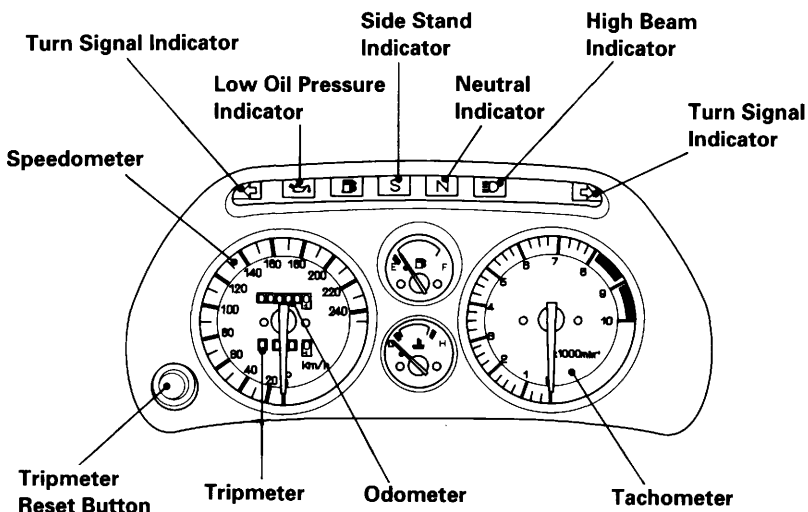

(For model equipped with CBS/ABS/TCS)

