

---

## FAIRING POCKETS

Fairing pockets are located on both sides of the motorcycle.

To open the left pocket lid, pull up the knob.

To remove the right pocket lid, insert the ignition key, turn it clockwise and open the lid.

### NOTE:

- Make sure the fairing pockets are closed before riding.
- When washing your motorcycle, be careful not to flood this area with water.

### ⚠ WARNING

- **Fairing pockets are for lightweight items. Do not carry more than 2 kg (4.5 lbs) in each side.**
- **Load weight equally in both sides to avoid and imbalance that may result in a loss of vehicle control.**
- **Excessive weight may adversely affect vehicle handling and control.**
- **Review Loading and Accessories before loading (page 4).**

