

PARTS LOCATION

MULTI-DISPLAY

Your motorcycle is equipped with a *Multi-display* that presents various displays. This section explains display functions and operations.

Initial Display

When the ignition switch is turned ON, the display will temporarily show all the modes and digital segments so you can make sure the liquid crystal display is functioning properly. (Except digital clock)

The unit “mile/ℓ” and “mile” will be displayed only for E type.

Digital clock and tripmeter will reset if the battery is disconnected.

