



# PARTS LOCATION

《When less than 5 liters》

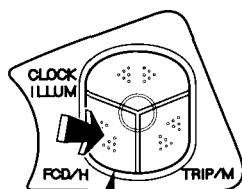

FCD/H button

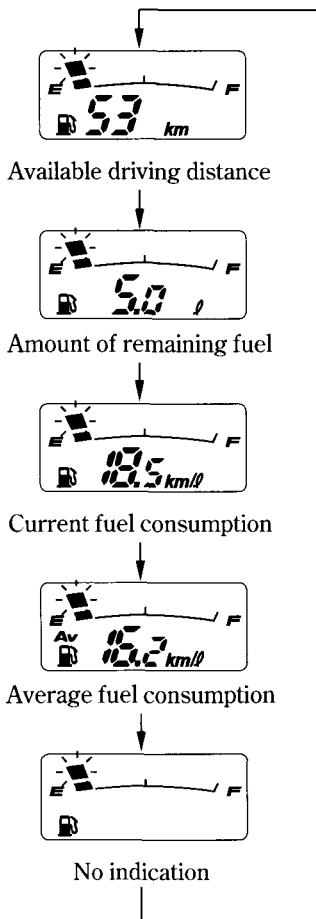

- When the remaining fuel becomes 5 liters or less, the indication automatically changes to the available driving distance.  
(Except no indication)
- When the battery terminal is disconnected, the available driving distance, the amount of remaining fuel and the average fuel consumption memories will be reset.
- When the battery terminal is disconnected with 5 liters or less fuel remaining, the available driving distance and the amount of remaining fuel may be shown inaccurately in some cases.