
Occasionally you may experience light spark knock while operating under heavy loads. This is no cause for concern, it simply means your engine is operating efficiently.

Do not overfill the tank. There should be no fuel in the filler neck.

After refueling, be sure to tighten the fuel fill cap firmly by turning it clockwise until it clicks.

Close the fuel fill compartment and turn the ignition key counterclockwise.

Remove the key from the fuel fill compartment.

⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks, and flame away.
- Refuel only outdoors.
- Wipe up spills immediately.

