

# MAJOR COMPONENTS

## (Information you need to operate this motorcycle)

---

### FINAL DRIVE OIL

#### Oil Level Check

Check the final drive oil level when specified by the maintenance schedule (page 83 ).

1. Place the motorcycle on its center stand on a firm, level surface.
2. Remove the oil filler cap.
3. Check the oil level. It should be flush with the lower edge of the oil filler hole.
4. If the level is low, check for oil leaks. Add the recommended oil through the oil filler hole until it reaches the lower edge of the opening.
5. Install the oil filler cap.

#### Recommended Oil:

**HYPOID GEAR OIL SAE 80**

