

FEATURES

(Not required for operation)

WINDSHIELD HEIGHT ADJUSTMENT

The height of the initial configuration of a window shield can be adjusted to two stages 60 mm (2.3 in).

To adjust the Height of an initial configuration

1. Remove the windshield cover by removing screws.

To raise:

Loosen the nut and slide the windshield to set lower guide.

To lower:

Loosen the nut and slide the windshield to set upper guide.

2. Tighten the nuts and install the windshield cover after adjustment.

Make sure the windshield is locked before riding.

