
Side Cover


The right and left side cover can be removed in the same manner.

Removal:

1. Remove the saddlebag (page 59).
2. Remove the seat (page 57).
3. Remove the side cover by removing the bolts.

Installation:

- Installation can be done in the reverse order of removal.

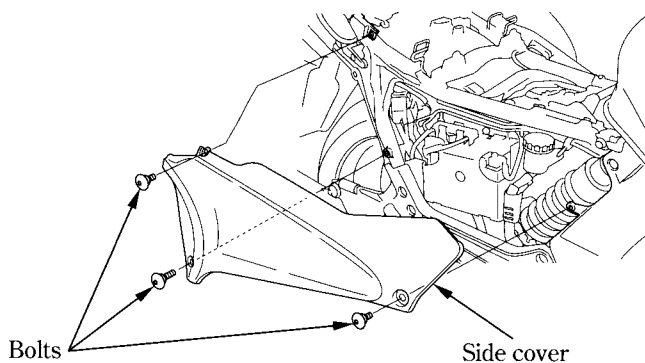

Maintenance Lid

The right and left maintenance lid can be removed in the same manner.

Remove the maintenance lid by removing the clip.

