

MAINTENANCE

Inner Cowl

The right and left inner cowl can be removed in the same manner.

Removal:

1. Remove the clips A.
2. Remove the Inner cowl by removing the screw and clips B.

Installation:

- Installation can be done in the reverse order of removal.

