

# PARTS LOCATION

---

## Air Temperature Meter

Air temperature meter shows air temperature digitally.

### Temperature Display

|   |   |
|---|---|
| Below $-11^{\circ}\text{C}$                           | "— —" is displayed.   |
| Between: $-10^{\circ}\text{C}$ — $50^{\circ}\text{C}$ | Actual air temperature is indicated.                        |
| Above $50^{\circ}\text{C}$                            | The display will remain and blink " $50^{\circ}\text{C}$ ". |

The temperature sensor is located in the fairing. The temperature reading can be affected by heat reflecting from the road surface, engine heat, and the exhaust from surrounding traffic. This can cause an error in the temperature reading when your speed is under 30 km/h (19 mph).

