
Side Cover

The right side cover must be removed for battery and fuse maintenance.
The left side cover must be removed for fuse maintenance.


The right and left side cover can be removed in the same manner.

Removal:

1. Remove the saddlebag (page 55).
2. Remove the seat (page 53).
3. Remove the side cover by removing the bolts.

Installation:

- Installation can be done in the reverse order of removal.

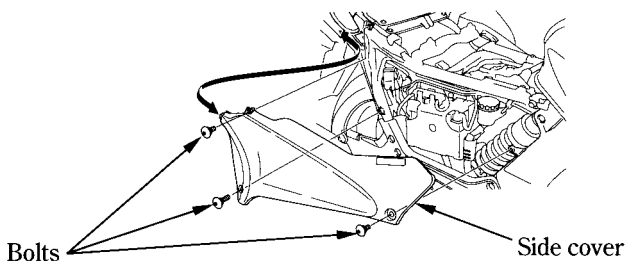

Maintenance Lid

The maintenance lid must be removed to remove the overhead cover.
The left maintenance lid must be removed to inspect the coolant reserve tank.

The right and left maintenance lid can be removed in the same manner.

Remove the maintenance lid by removing the clip (page 62).

