

# MAINTENANCE

---

## Brake/Tail Light Bulb

1. Remove the rear fender (page 106 ).
2. Turn the socket 90° counterclockwise, then pull it out toward you.
3. Pull out the bulb without turning.
4. Install a new bulb in the reverse order of removal.

