


Turning the valve to “OFF” will prevent fuel from flowing out the vent hole when transporting the motorcycle.

---

**Fuel Valve :** The fuel valve ① is located at the left side of the carburetor. When the fuel valve is in the “S” position, fuel can not flow from the fuel tank to the carburetor. The fuel valve should be set in this position when the motorcycle is parked or carried. Turning the fuel valve to the “ON” position allows fuel to flow to the carburetor from the main fuel supply. Turning the fuel valve to the “RES” position allows fuel to flow from the reserve supply. When the main fuel supply is exhausted, the fuel valve should be turned to the “RES” position.

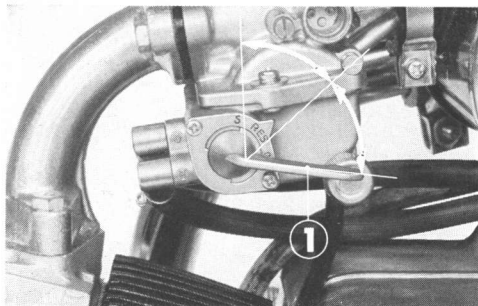

① Fuel valve