


Oil Filter Cleaning

The oil filter is a centrifugal and screen type.


1. Drain the engine oil in accordance with Engine Oil Change on page 34.
2. Remove the engine protector.
3. Remove the foot pegs and kick starter pedal from the engine.
4. Remove the rear brake adjusting nut.
5. Remove the right crankcase cover.
6. Separate the right crankcase cover gasket from the right crankcase.
7. Pull out the filter screen ① from the

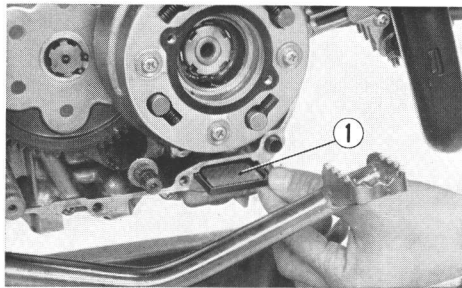

① Filter screen

right crankcase and wash it with clean solvent.

8. Remove the clutch outer cover ② from the clutch outer ③ by unscrewing the two screws.
9. Remove all metal chips and dirt from the center of the clutch outer with a clean rag.
10. Ressembly of the component parts is performed in the reverse order of the procedure above. Replace damaged or defective crankcase gasket with a new gasket.

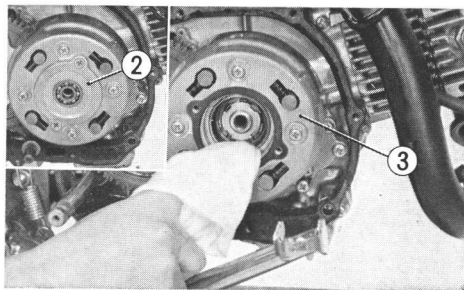

② Clutch outer cover

③ Clutch outer