

Air Filter Maintenance

When the air filter is clogged, it affects engine performance and; therefore, should be cleaned periodically.

1. Unscrew the air filter cover attaching screw ① and remove the cover ②.
2. Unscrew the hex bolt ③ and remove the air filter element plate ④.
3. Pull out the air filter element ⑤ from the air filter case.
4. Wash air filter element in clean stodd-




- ① Air filter cover attaching screw
② Air filter cover

- ard solvent and allow to dry thoroughly.
5. Soak air filter element in clean gear oil (SAE 80–SAE 90) until saturated, then squeeze out excess oil.
6. Reinstall air filter element.
7. Reinstall air filter cover.

WARNING:

Gasoline or low flash point solvents are highly flammable and must not be used to clean air filter element.

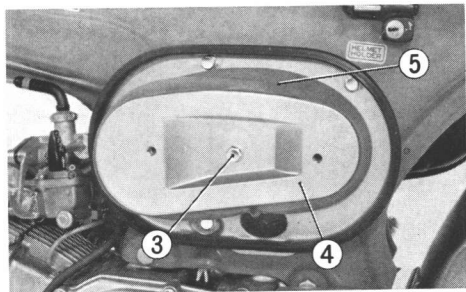

- ③ Hex bolt
④ Air filter element plate
⑤ Air filter element