


3. If the drive chain is found to require adjustment, the procedure is as follows:
- Remove the rear axle nut cotter pin ② and loosen the rear axle nut ③.
 - Turn the adjusting nuts ④ on both the right and left chain adjusters to increase or decrease chain tension. Align the chain adjuster index marks ⑤ with the reference marks ⑥ on

- both sides of the rear fork.
- Tighten the rear axle nut and secure the nut with a new cotter pin.
- Recheck drive chain tension.
- Rear brake pedal free travel is affected when repositioning the rear wheel to adjust drive chain tension. Check rear brake pedal free travel and adjust as necessary (page 53).

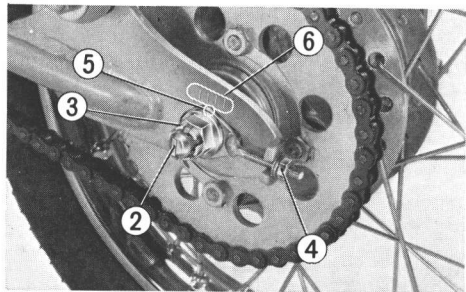

- | | |
|-----------------|------------------|
| ② Cotter pin | ⑤ Index mark |
| ③ Rear axle nut | ⑥ Reference mark |
| ④ Adjusting nut | |