


## Headlight Bulb Replacement

1. Remove the headlight rim from the headlight case after removing the mounting screw.
2. Remove the two lock pins ①, and unscrew the lock screws ②, and beam adjusting screw ③.
3. Remove the sealed beam unit ④ from the headlight rim.

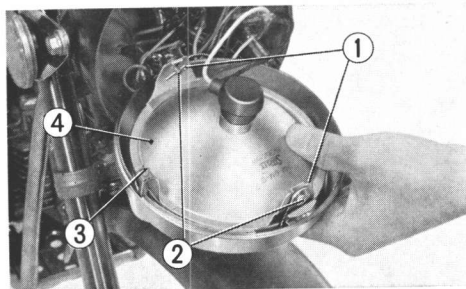


① Lock pins  
② Lock screws

③ Beam adjusting screw  
④ Sealed beam unit

## Tail/Stoplight Bulb Replacement

1. Remove the two tail/stoplight lens screws.
2. Press the bulb ⑤ inward and twist to the left, and the bulb can be removed.
3. Replace with a good bulb.
4. When installing the taillight lens, do not overtighten the screws.

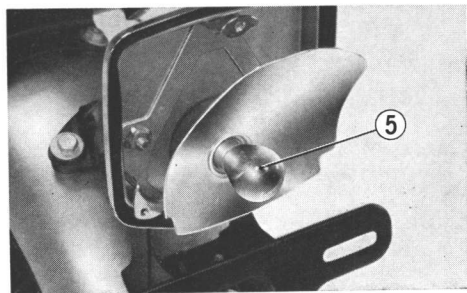

⑤ Tail/stoplight bulb