


Oil Filter Cleaning

Engine oil from the crankcase sump flows through a metal filter screen and is pumped through a centrifugal oil filter to engine components. The filtering process purifies the oil to minimize engine wear. Both filters should be cleaned yearly to ensure efficient operation.

1. Drain the engine oil (page 29).
2. Remove the filter screen ① and spring ② and wash them in clean solvent, and then reinstall.

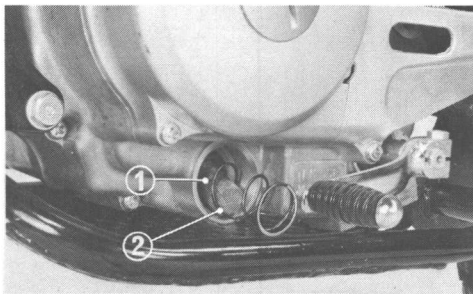


① Filter screen

② Spring

Oil Filter Rotor Cleaning

1. Drain the engine oil.
2. Remove the kick starter pedal.
3. Disconnect the clutch cable from the clutch lever.
4. Remove the right crankcase cover.
5. Remove the oil filter rotor cover.
6. Clean any sludge from the center of the oil filter rotor ②. Reassemble the filter.

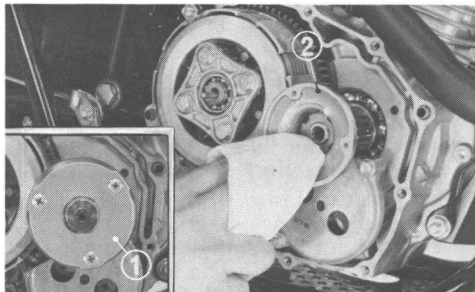

① Oil filter rotor cover

② Oil filter rotor