

DESCRIPTION

PARTS LOCATION

- (1) Front brake lever
- (2) Throttle lever
- (3) Neutral indicator lamp
- (4) Reverse indicator lamp
- (5) Rear brake lever/parking brake
- (6) Fuel tank cap
- (7) Fuel valve
- (8) Recoil starter
- (9) Gearshift pedal
- (10) Neutral indicator
- (11) Posi-Torque Speed Range and Reverse Selector
- (12) Front Carrier
- (13) Rear Carrier

