 I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace A: Adjust 		lace, INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
	FUEL LINE	I: (EVE	I: (EVERY YEAR)	
*	FUEL FILTER	C: (EVE	C: (EVERY YEAR)	
	THROTTLE OPERATION	I	I	59
	FINAL DRIVE OIL		I: (EVERY YEAR) R: (EVERY 2 YEARS)	
	BRAKE FLUID (FRONT)	I	I *R:(EVERY YEAR)	56
*	BRAKE SHOES	I: (EVE	I: (EVERY YEAR)	
	BRAKE SYSTEM	I	I	55
*	CLUTCH	A	Α	54
*	SUSPENSION		I	
*	SPARK ARRESTER		С	64
	ALL NUTS, BOLTS, FASTENERS	I	I	
	LIGHTING EQUIPMENT	I	I	<u> </u>
	TIRES	I	I	24
*	STEERING HEAD BEARING	A: (EVE	A: (EVERY YEAR)	
*	STEERING SYSTEM	I: (EVE	I: (EVERY YEAR)	