

## FUEL TANK CONTROLS

### Fuel Tank Cap

The fuel tank cap (Fig. 2-14) has a fuel cap vent lever (2) with ON and OFF positions. The lever should be turned to ON to allow fuel to flow when running the engine. Turn the vent lever to OFF to prevent fuel from flowing out the vent hole when transporting the FOURTRAX.

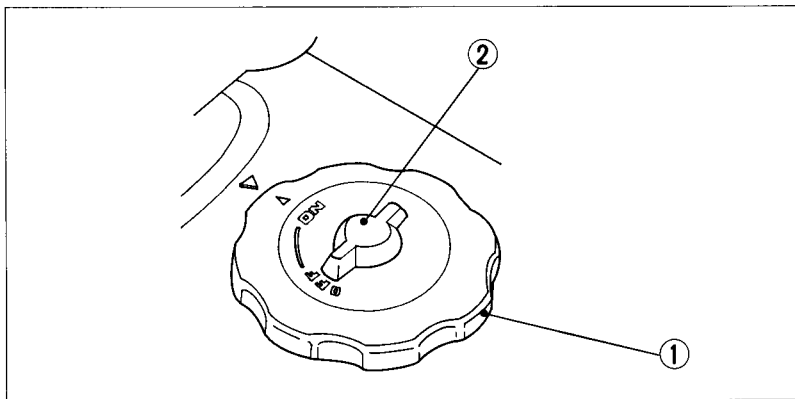


Fig. 2-14

(1) Fuel tank cap

(2) Fuel cap vent lever

### Fuel Valve

The fuel valve (Fig. 2-15) is on the right side of the fuel tank, and it has three positions:

#### OFF

When the fuel valve is in the OFF position, fuel cannot flow to the carburetor. Turn the valve OFF whenever the FOURTRAX is not in use.