

Storage Compartment

The storage compartment (Fig. 2-20) is behind the seat (2). To open the compartment, remove the seat by lifting up the seat lock lever (1), then press down on the lock tab (6) on the cover. The Owner's Manual (4) and air pressure gauge (5) should be stored in the storage compartment.

The tool kit (7) is secured to the frame with a band on the side of the battery.

NOTE:

The air pressure gauge should be placed in the recess in the storage compartment.

Be careful not to flood this area when washing your FOURTRAX.

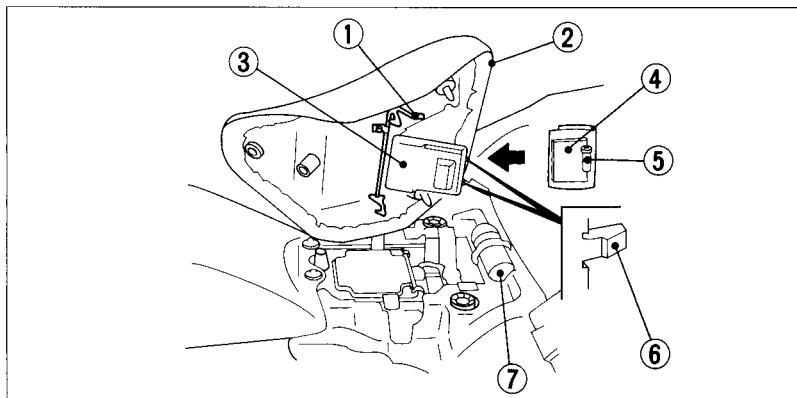


Fig. 2-20

(1) Seat lock lever

(2) Seat

(3) Storage compartment

(4) Owner's manual

(5) Air pressure gauge

(6) Lock tab

(7) Tool kit