


## THROTTLE CABLE

Inspect throttle cable condition and operation. Re-route the cable if it is improperly installed. Replace the cable if it has become worn or kinked. Lubricate the cable with a commercially available cable lubricant to prevent premature wear or corrosion. Free play, measured at the tip of the throttle lever (1), should be maintained at 3–8 mm (1/8–5/16 in). Adjustment can be made with the adjuster (2) on the throttle lever housing. Loosen the lock nut (3) and turn the adjuster.

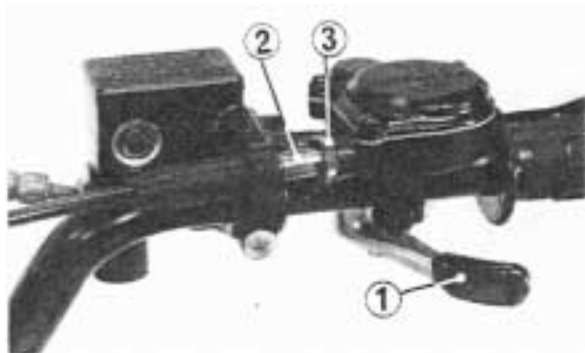

(1) Throttle lever (2) adjuster  
(3) Lock nut