

MAINTENANCE SCHEDULE

	FREQUENCY	ITEMS	Which ever comes first ↔	INITIAL		REGULAR		Refer to page
				MAINTENANCE		MAINTENANCE INTERVAL		
				mi	100	600	1200	
				km	150	1000	2000	
	NOTE	HOURS	20	100	200			
EMISSION RELATED ITEMS	*	FUEL LINE				I	—	
	*	THROTTLE OPERATION				I	86	
	*	CARBURETOR CHOKE				I	91	
		AIR CLEANER	(NOTE 1)		C	C	87–89	
		AIR CLEANER HOUSING	(NOTE 2)		I	I	90	
		DRAIN TUBE						
		SPARK PLUG			I	I	99	
	*	VALVE CLEARANCE			I	I	I	100
		ENGINE OIL			R	R	R	26,94–97
	**	ENGINE OIL STRAINER					C	—
	**	SCREEN						
	**	ENGINE OIL CENTRIFUGAL FILTER					C	—
*	ENGINE IDLE SPEED			I	I	I	92	

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate