



Air Cleaner

Cleaning

1. Remove the seat by pulling the seat lock lever (1) up.

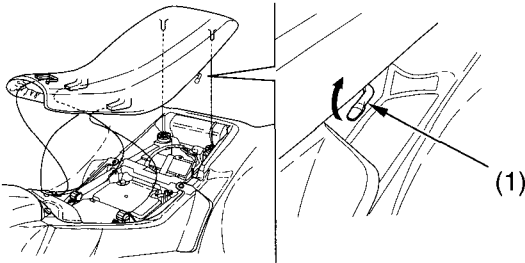

UNDER SEAT

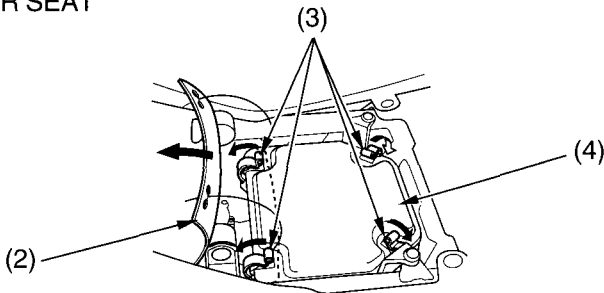

(1) seat lock lever
(2) rubber sheet

(3) retainer clips
(4) air cleaner housing cover

2. Uncover the rubber sheet (2) from the retainer clips (3).
3. Unlatch the four retainer clips and remove the air cleaner housing cover (4).