

Engine Oil

Changing Engine Oil

Refer to *Safety Precautions* on page 75 .

NOTICE


Using the wrong oil filter may result in leaks or premature engine damage.

This procedure requires mechanical skill and professional tools such as a torque wrench, as well as a means for disposing of the drained fluid (page 152). If you do not have the skills or the tools, see your Honda dealer.

Drain the Engine Oil:

1. With the ATV on the level ground, remove the oil filler cap/dipstick from the right crankcase cover.
2. Place an oil drain pan under the crankcase and remove the oil drain plug (1).

UNDER ENGINE

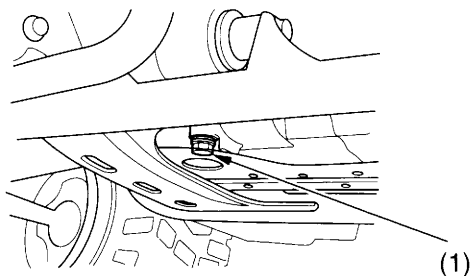

(1) oil drain plug