


# Air Cleaner

---

## Cleaning

1. Remove the seat (page 86 ).
2. Uncover the rubber sheet ( 1 ) from the retainer clips ( 2 ).
3. Unlatch the four retainer clips ( 3 ).
4. Remove the air cleaner housing cover ( 4 ).

### UNDER SEAT

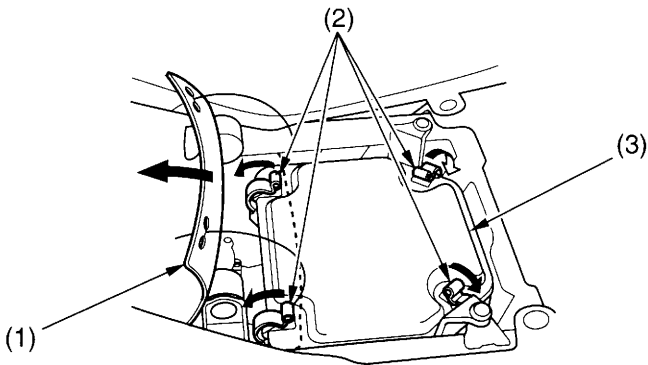

(1) rubber sheet  
(2) retainer clips

(3) air cleaner housing cover