

Operation Component Locations

parking brake lock lever
parking brake pin


headlight
switch

reverse assist lever

headlight
dimmer
switch

choke
knob

front brake lever

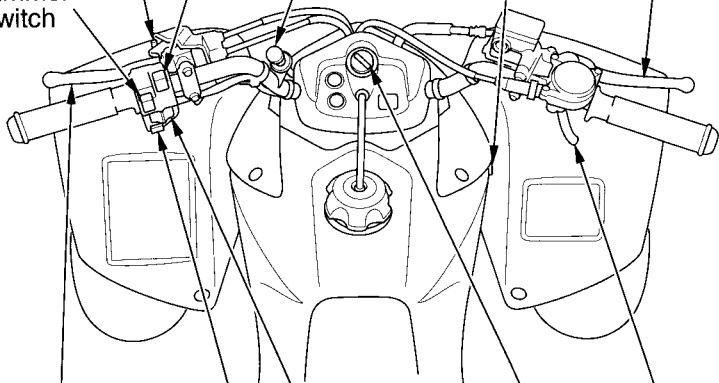

throttle lever

clutch lever/
parking brake lever

engine stop
switch

ignition switch

start button