## If Your Engine Quits or Won't Start

POSSIBLE CAUSE	WHAT TO DO
idles roughly, too fast, stalls	Check engine idle adjustment (page 111). If the problem persists, see your Honda dealer.
poor engine performance at altitudes above 1,000 m. runs erratically, misfires	Ask your Honda dealer to modify the carburetion with a high altitude jet. Refer to High Altitude Carburetor Adjustment, page 181. See your Honda dealer.
blubbers (rich fuel mixture)	See your Honda dealer.
sooty exhaust (rich fuel mixture)	See your Honda dealer.
detonates or pings under load	If applicable, switch to the recommended octane petrol (page 87) or change your brand of petrol. If the problem persists, see your Honda dealer.
afterfires (backfires)	See your Honda dealer.
pre-ignition (runs on after ignition switched OFF)	See your Honda dealer.