


Starting Procedure (after Preparation)

To restart a warm engine, follow the procedure for High Air Temperature.

Normal Air Temperature


10°–35° C (50°–95° F)

1. Move the choke lever (4) while pushing it all the way to “Fully Open (A)”.
2. Turn the ignition switch (5) to ON. Make sure that the transmission is in the neutral by checking the neutral indicator lamp (6).
3. Press the starter button (7) and start the engine.
4. Immediately after the engine starts, release the starter button.
5. About a half minute after the engine starts, move the choke lever while pushing it all the way to “Fully Closed (B)”.
6. If idling is unstable, open the throttle slightly.

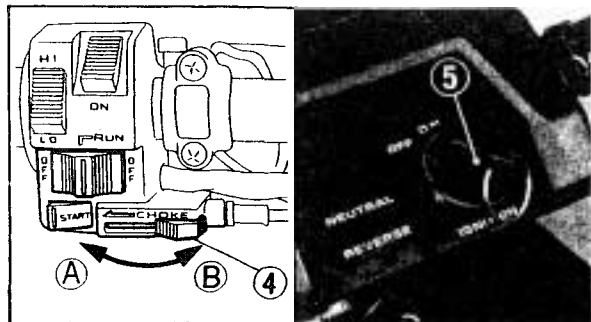

(4) Choke lever

(5) Ignition switch

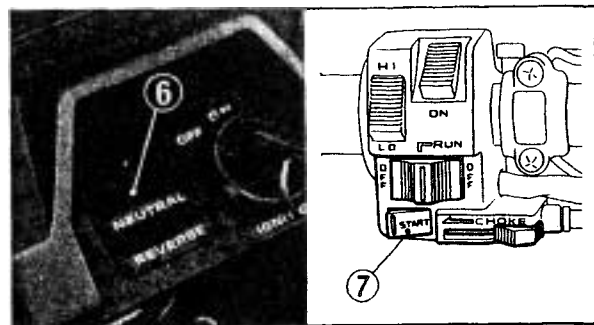

(6) Neutral indicator lamp

(7) Starter button

NOTE:

- * Do not use the electric starter for more than 5 seconds at a time. Release the starter button for approximately 10 seconds before pressing it again.
- * The starter motor will operate only when the transmission is in neutral.