


## CLUTCH

1. Make sure the ignition switch is OFF.
2. Loosen the lock nut (1), and turn the clutch adjuster (2) counterclockwise until you feel resistance. Then turn the adjuster 1/8–1/4 turn clockwise, and tighten the lock nut to hold the adjuster in this position.
3. After adjustment, start the engine and test ride the FOUR TRAX to be certain that the clutch is operating properly.

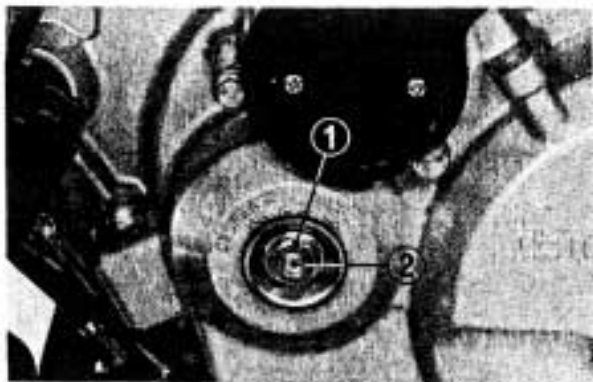

(1) Lock nut


(2) Clutch adjuster

## BREATHER TUBE

- Remove the drain plug (1) from the tube and drain the deposits.
- Reinstall the drain plug.

### NOTE:

- \* Service more frequently when ridden in rain, at full throttle, or when deposits can be seen in the transparent section (2) of the drain tube.

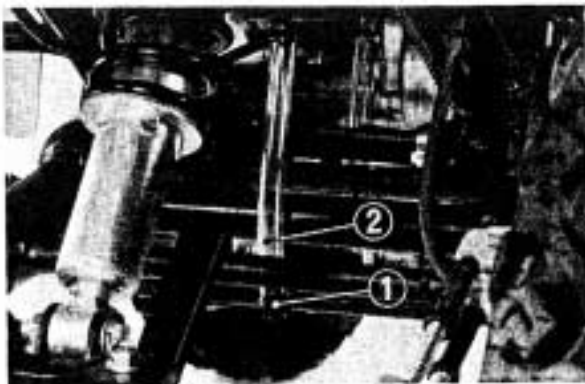

(1) Drain plug

(2) Transparent section