


Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheels off the ground.
2. Loosen the wheel nuts (1).
3. Remove the wheel.

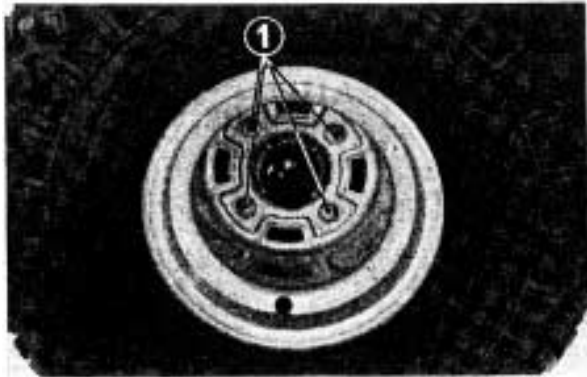

(1) Wheel nuts

Installation Notes:

Reinstall the rear wheels and tighten the wheel nuts (1) in a cross pattern to 50–60 N·m (5.0–6.0 kg·m, 36–43 ft·lb).

WARNING

* *If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.*