

## FUEL

### Fuel Valve

The three-way fuel valve (1) is on the left side of the carburetor.

#### OFF

With the fuel valve in the OFF position, fuel cannot flow from the tank to the carburetor. Turn the valve off whenever the TRX is not in use.

#### ON


With the fuel valve in the ON position, fuel will flow from the main fuel supply to the carburetor.

#### RES

With the fuel valve in the RES position, fuel will flow from the reserve fuel supply to the carburetor. Use the reserve fuel only when the main supply is gone. Refill the tank as soon as possible after switching to RES. The reserve fuel supply is 2.0 l (0.52 US gal).

#### NOTE:

- \* Do not operate the TRX with the fuel valve in the RES position after refueling. You may run out of fuel with no reserve.

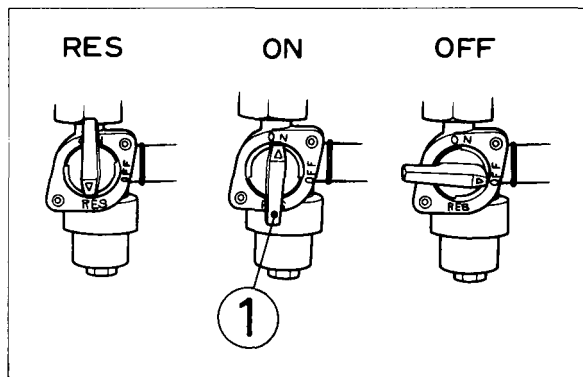

(1) Fuel valve