


# If You Have a Flat Tire


---

## Emergency Wheel Removal/Installation

Refer to *Safety Precautions* on page 79 .

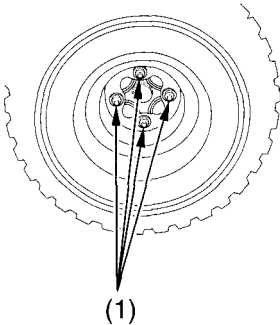

(1) wheel nuts

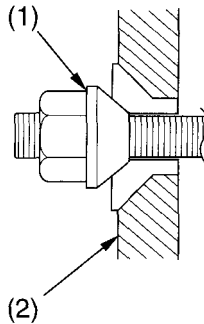

(2) wheel rim

### Removal

1. Park your ATV on a firm, level surface.
2. Raise the front (or rear) wheels off the ground and place a support block under the vehicle.
3. Remove the wheel nuts ( 1 ) with a 17 mm socket wrench.
4. Remove the wheel.