

FREQUENCY  ITEMS	Whichever comes first  ⇒	INITIAL		REGULAR		Refer to page
		MAINTENANCE		MAINTENANCE INTERVAL		
		mi	100	600	1200	
		km	150	1000	2000	
NOTE	HOURS	20	100	200		
REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)		108
* BRAKE FLUID	(NOTE 3)					120
* BRAKE SHOE WEAR	(NOTE 1)					125
BRAKE SYSTEM						117 – 126
* REVERSE LOCK SYSTEM						112
SKID PLATES, ENGINE GUARD						133
* CLUTCH SYSTEM						111
* SUSPENSION						—
* SPARK ARRESTER				C	C	134
* NUTS, BOLTS, FASTENERS						—
** WHEELS/TIRES						127 – 131
** STEERING SHAFT HOLDER BEARINGS						—
** STEERING SYSTEM						—

\* Should be serviced by your authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda service manual.

\*\* In the interest of safety, we recommend these items be serviced only by your authorized Honda dealer.

- NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.  
2. Service more frequently after riding in very wet or muddy conditions.  
3. Replace every 2 years. Replacement requires mechanical skill.