

# Engine Oil

## Changing Engine Oil


Refer to *Safety Precautions* on page 83 .

This procedure requires mechanical skill and professional tools such as a torque wrench, as well as a means for disposing of the drained fluid (page 164). If you do not have the skills or the tools, see your Honda dealer.

### *Drain the Engine Oil:*

1. With the ATV on the level ground, remove the oil filler cap/dipstick from the front crankcase cover.
2. Place an oil drain pan under the crankcase and remove the engine oil drain plug ( 1 ) and sealing washer ( 2 ).

### UNDER ENGINE

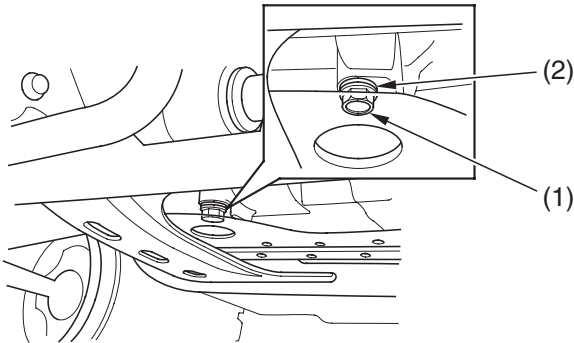

(1) engine oil drain plug

(2) sealing washer

(cont'd)