

MAINTENANCE AND REPAIRS

MAINTENANCE SCHEDULE

D U	FREQUENCY	ITEMS	Whichever comes first	INITIAL		REGULAR		Refer to page	
				MAINTENANCE		MAINTENANCE INTERVAL			
				↔	mi	100	600		1200
					km	150	1000		2000
	NOTE	HOURS	20	100	200				
*		FUEL LINE				I		—	
*		THROTTLE OPERATION				I		92	
*		CARBURETOR CHOKE				I		97	
		AIR CLEANER	(NOTE 1)			C	C	93—95	
		AIR CLEANER HOUSING	(NOTE 2)			I	I	96	
		DRAIN TUBE							
		SPARK PLUG				I	I	105	
*		VALVE CLEARANCE			I	I	I	106	
		ENGINE OIL			R	R	R	100 103	
**		ENGINE OIL STRAINER SCREEN					C	—	
**		ENGINE OIL CENTRIFUGAL FILTER					C	—	
*		ENGINE IDLE SPEED			I	I	I	97	

- I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.
C: Clean R: Replace
A: Adjust L: Lubricate