

CONTENTS

| | Page |
|----------------------------------|------|
| MAINTENANCE AND REPAIRS | 80 |
| Maintenance Schedule | 80 |
| Maintenance Precautions | 81 |
| Tool Kit..... | 83 |
| Fuel System | 84 |
| Lubrication..... | 96 |
| Engine | 101 |
| Clutch | 103 |
| Electrical System..... | 105 |
| Brakes | 109 |
| Wheels and Tires..... | 119 |
| Seat Removal | 124 |
| Skid Plates | 125 |
| Spark Arrester | 126 |
| TRANSPORTING YOUR FOURTRAX | 128 |
| CLEANING YOUR FOURTRAX | 131 |
| STORING YOUR FOURTRAX | 133 |
| SPECIFICATIONS | 136 |
| WIRING DIAGRAM..... | 138 |
| CONSUMER INFORMATION..... | 139 |
| WARRANTY SERVICE..... | 141 |
| SERIAL NUMBERS..... | 142 |
| INDEX | 143 |
| SERVICE MANUAL..... | 148 |