

MAINTENANCE AND REPAIRS

MAINTENANCE SCHEDULE

D U	FREQUENCY	Which ever comes first	INITIAL		REGULAR		Refer to page	
			ITEMS	↪	MAINTENANCE	MAINTENANCE INTERVAL		
					mi	600		1200
					km	1000		2000
NOTE	HOURS	20	100	200				
EMISSION RELATED ITEM	*	FUEL LINE				I	—	
	*	THROTTLE OPERATION				I	88	
	*	CARBURETOR CHOKE				I	93	
		AIR CLEANER	(NOTE 1)			C	C	89–93
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	92
		SPARK PLUG				I	I	101
	*	VALVE CLEARANCE			I	I	I	102
		ENGINE OIL			R	R	R	12,96–99
	**	ENGINE OIL STRAINER SCREEN					C	—
	**	ENGINE OIL CENTRIFUGAL FILTER					C	—
	*	ENGINE IDLE SPEED				I	I	I

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate