

Air Cleaner Housing Drain Tube

The air cleaner housing drain tube (Fig. 4-7) should be serviced in accordance with the Maintenance Schedule. (Riding through water may require more frequent inspection.) If deposits can be seen in the drain tube, the tube must be cleaned before starting the vehicle.

To clean the drain tube:

1. Remove drain tube A (1) by removing the clip (2).
2. Remove drain tube B (3) by removing the clip (4).
(except California)
3. Drain the deposits.
4. Reinstall the drain tubes, securing each with its clip.

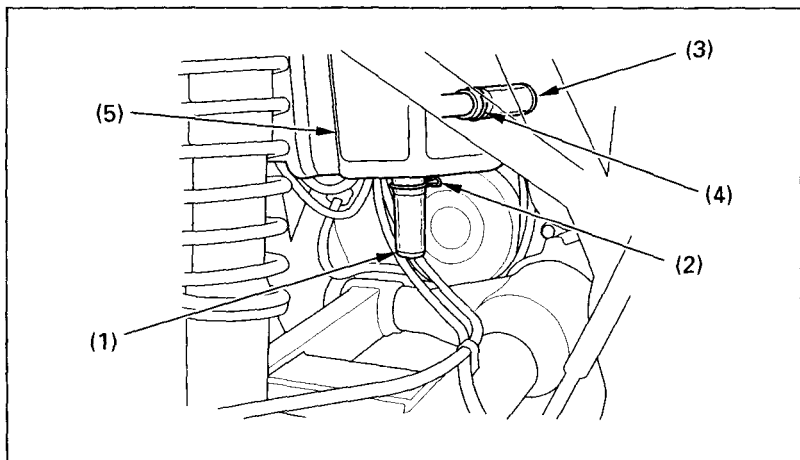


Fig. 4-7

(1) Drain tube A
(2) Clip

(3) Drain tube B (except California)
(4) Clip (except California)
(5) Air cleaner housing