

Reverse and Neutral Indicator Lamps

The reverse indicator lamp (1) and the neutral indicator lamp (2) (Fig. 2-14) are next to the ignition switch.

The reverse indicator lamp will light when the transmission is in reverse and the ignition switch is **I** (ON). The neutral indicator lamp will light when the transmission is in neutral and the ignition switch is **I** (ON).